



- 02. 현수막봉 (PLACARD BATTEN)
-01. 앞무대조명 (APRON LIGHT)
00. 영정선 (ZERO LINE)
01. 현막 1 (#1 HOUSE CURTAIN)
02. 조명봉 1 (#1 LIGHT BATTEN)
03. 장치봉 1 (#1 SET BATTEN)
04. 천장음향반사판 1 (#1 ACOUSTICAL SHELL-CEILING)
05,06. 측면음향반사판 1,2 (#1,2 ACOUSTICAL SHELL-SIDE WALL)
07. 장치봉 2 (#2 SET BATTEN)
08. 300°정사막 (300°SCREEN)
09. 현막 1 (#1 DRAW CURTAIN)
10. 영사막 (SCREEN)
11. 조명봉 2 (#2 LIGHT BATTEN)
12. 장치봉 2 (#2 SET BATTEN)
13. 장치봉 3 (#3 SET BATTEN)
14. 천장음향반사판 2 (#2 ACOUSTICAL SHELL-CEILING)
15,16. 측면음향반사판 3,4 (#3,4 ACOUSTICAL SHELL-SIDE WALL)
17. 끝막 2 + 머리막 1 (#2 DRAW CURTAIN + #1 HOUSE BORDER)
18. 장치봉 5 (#5 SET BATTEN)
19. 후면음향반사판 (ACOUSTICAL SHELL-BACK WALL)
20. 조명봉 3 (#3 LIGHT BATTEN)
21. 하늘막상단조명 + 머리막 2 (UPPER CYCLIGHT + #2 HOUSE BORDER)
22. 장치봉 6 (#6 SET BATTEN)
23. 장치봉 7 (#7 SET BATTEN)
24. 장치봉 8 (#8 SET BATTEN)
25. 하늘막 (CYCLORAMA)
26. 검정하늘막 (BLACK CYCLORAMA)
27. 조명사다리 1 (#1 LIGHTING LADDER)
28. 조명사다리 2 (#2 LIGHTING LADDER)
29. 조명사다리 3 (#3 LIGHTING LADDER)
30. 조명사다리 4 (#4 LIGHTING LADDER)